


Yleisohje lämpötila-anturin sijainnille

Allmänna instruktioner för placering av termostaten

General instruction for placing the temperature sensor

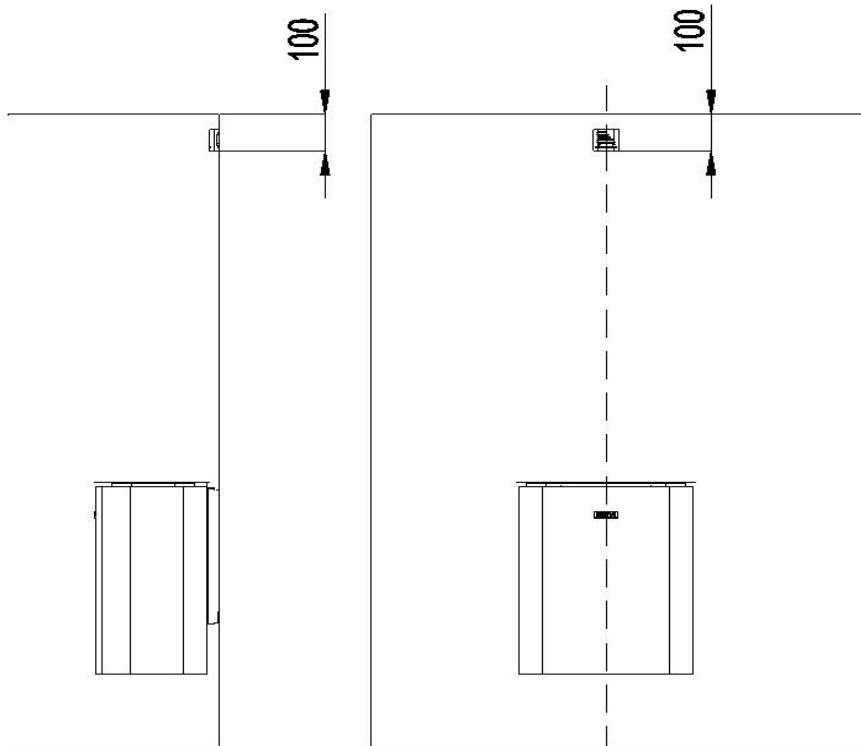

1. Asenna anturi seinälle, sähkökiukaan yläpuolelle keskilinjaan 100mm katosta alaspäin / **Placera termostaten på väggen ovanför bastuaggregatets mittlinje så att den ligger 100mm från taket** / Install the temperature sensor to the wall above the sauna heater on centerline of the heater and 100mm down from the roof
2. Tuloilmaventtiili ei saa sijaita 1000mm lähempänä lämpötila-anturia. Jos tuloilmaventtiili sijaitsee 500-1000mm etäisyydellä anturista on käytettävä suunnattavaa tuloilmaventtiiliä jolla ilmavirta saadaan suunnattua pois päin anturista. Lähellä anturia sijaitsevan tuloilmaventtiilin ilmavirta voi vääristää anturin mittaustulosta ja kiuas voi ylikuumentua./ **Friskluftventilen måste ligga minst 1000mm från termostaten. Om friskluftventilen är placerad 500-1000mm från termostaten, måste en styrbar ventil användas och kalluften bör styras bortåt från aggregatet. Om friskluftventilen ligger för nära termostaten, kan termostaten inte läsa rätt temperatur, vilket kan leda till att aggregatet överhettas** / The supply air valve must not be located closer than 1000mm from the temperature sensor. If the valve is located 500-1000mm from the sauna heater, an adjustable valve is needed and set to channel the air away from the sauna heater. If the supply air valve is too close to the temperature sensor, the heater will receive false data and it might result in overheating the elements.
3. LUE JA NOUDATA KIUKAAN MUKANA TOIMITETTUA KÄYTTÖOHJETTA./ **LÄS OCH FÖLJ BASTUAGGREGATETS INSTRUKTIONER** / READ AND FOLLOW THE INSTRUCTION MANUAL OF THE HEATER